

Front Panel Settings

for NFC-H and NCB-H

navien

NOTICE

The front panel service kit does not include the previous installation information. After the replacing the old front panel with the new service kit, configure the installation details via the Main Menu & Service/Installer Menu on the front panel. For more information about settings, refer to the Installation Manual (Section 11 Operating the Boiler).

WARNING

Improper front panel settings can lead to death, serious injury, or property damage. The Installer menu must be set by a qualified professional.

Follow the instructions below to complete the start-up wizard.

1. Press the Power button (⏻) to turn the boiler on.



2. When the power is turned on for the first time, the start-up wizard will appear. Set the following items to complete the start-up wizard.

- Set the Language.
 - English
 - French
- Set the time.
 - YYYY:MM:DD:HH:MM:SS
- Set the units to display.
 - Celsius (°C), L/M, Meter
 - Fahrenheit (°F), GPM, Feet
- Check the gas type.
 - Natural Gas
 - Propane Gas
- Installation Elevation Check.

The display about the altitude setting description using the main DIP switch
- Set the zone system.
 - Zone Pump System
 - Zone Valve System

- Set the outdoor reset ON/OFF.
 - Enable
 - Disable
 - Set the outdoor reset curve(Enable select).
 - Finned Tube Baseboard
 - FAN Coil
 - Cast Iron Baseboard
 - Low mass Radiant
 - High mass Radiant
 - Radiator
 - Custom
 - Set the outdoor high temp.
 - Set the outdoor low temp.
 - Set the WWSD temp.
 - Set the auto-fill pressure.
 - Set the DHW recirculation.
 - No Recirculation
 - Combi Pre-heat
 - External Recirculation
 - Set the Combi-Pre heat mode (Combi Pre-heat select).
 - Always On/Intelligent/Weekly
 - Set the External Recirculation mode (External Recirculation select).
 - Always On/Intelligent/Weekly/Aquastat/Hotbutton
 - Setup Summary
- Once the Setup Wizard is finished, a summary of the settings will be displayed. Press the OK button (OK) at each summary screen until the air purge mode displayed. Settings made in the Setup Wizard can be adjusted from the Main Menu and Installer Menu as described in Section 11 in the Installation Manual.